

Quick Setup

- 1 Unpack your reader, antennas, cables and other equipment.
- 2 Connect antennas to the antenna inputs of the reader using the supplied cables.
- 3 Connect the reader to your network with an ethernet cable (not included).
- 4 Connect the power supply and line cord to the reader, then to a power source.
- 5 Download, install and launch the **ClearStream RFID** application (available at www.clearstreamrfid.com).
- 6 Select **Registration** from the **Tools** menu, then enter your Registration Code in the space provided on the **Registration** tab and click **Done**.

Note: ClearStream RFID requires registration to run. 30 day trial codes are available. To request a trial code, select **Registration** from the **Tools** menu and click the **Request trial code** link found on the **Trial** tab.

- 7 Click the **Readers** button and then click the **Add** button to choose your **Reader** manufacturer.
- 8 Enter your reader's IP address or Host name. If you do not know this info, you can search for the reader on your network by clicking in the **IP Address/Hostname** field and clicking the **Find** button.

Note: The Host Name is often printed on the side of the reader. This can be useful in identifying the correct reader amongst many.

- 9 Click the **Close** button and then save the project by selecting **Save** from the **File** menu.
- 10 Click the **Start/Stop** tab and then click the **Start All** button to begin reading tags into the provided sample Microsoft® Access® database.

